

Cargo Mount assembly instructions

A Install Cargo Mount

To attach: remove 2 existing outer screws. Align Cargo Mount and using M5 x 10mm (black) screws tighten to ~5Nm.

B Attaching Accessories

Use M5 x 10mm Screws (black) for mounting Tailfin products. Tighten to ~5Nm.

Or use M5 x 8mm Screws (silver, not shown) for mounting products with thin mounting surfaces (less than 2mm). Tighten to ~5Nm.


C 20mm Strap Slots

Slots for using straps to attach bottles or other items directly.



Warning

Ensure screws do not protrude through Cargo Mount, this may damage the AeroPack.

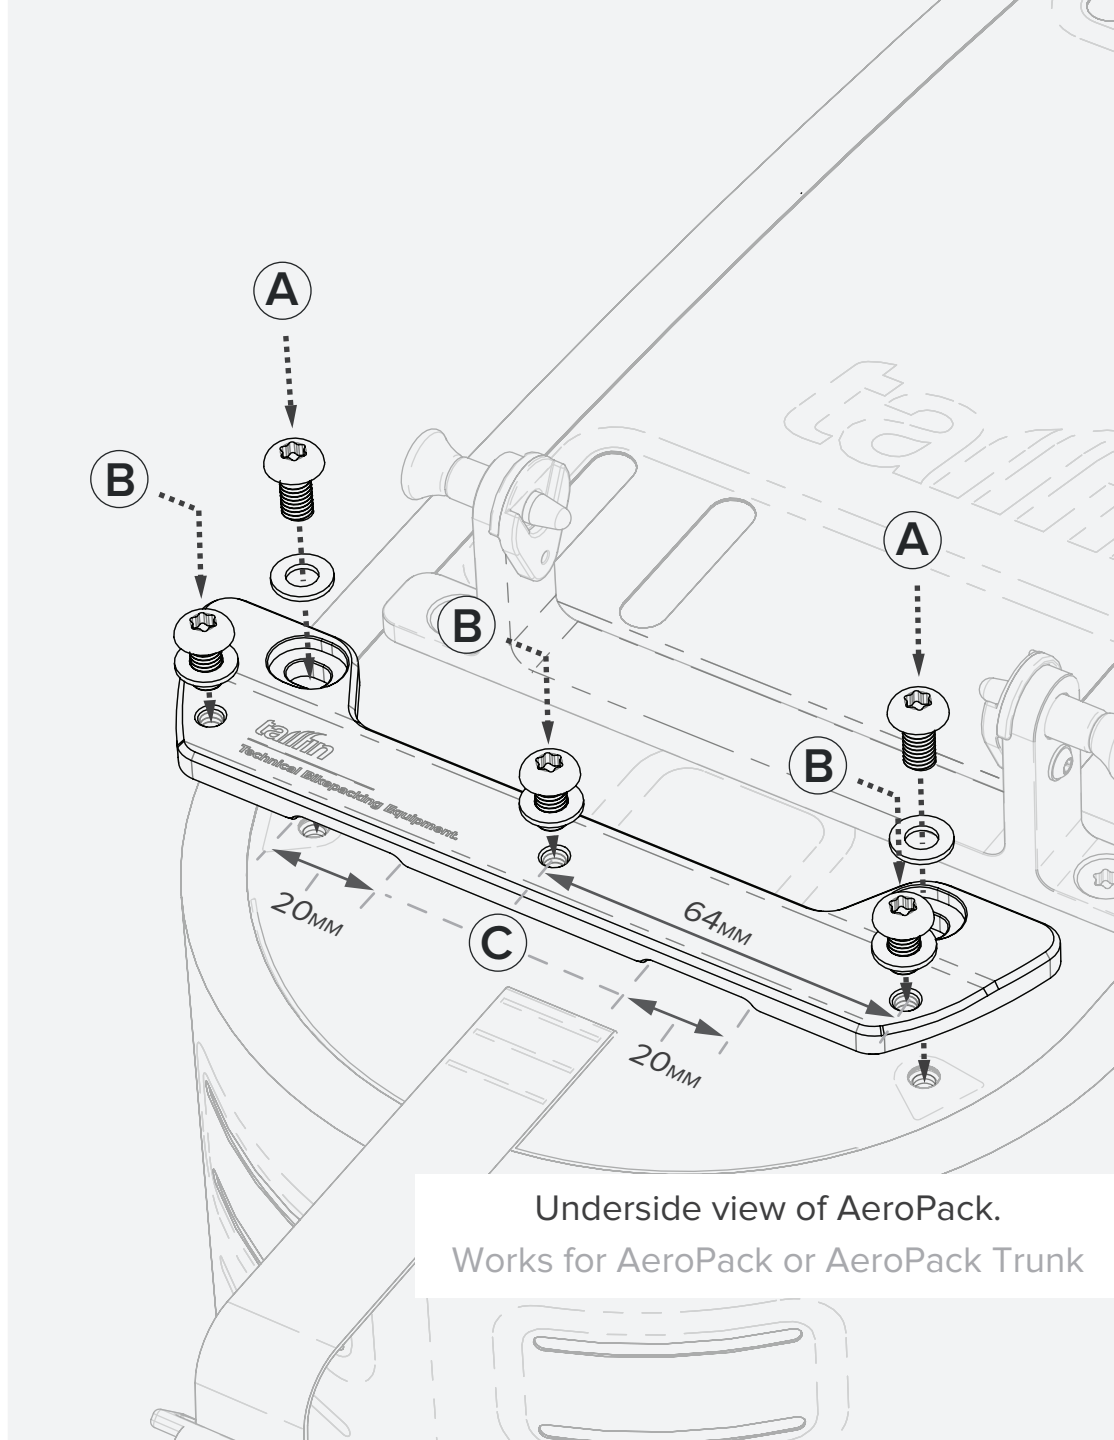

Underside view of AeroPack.
Works for AeroPack or AeroPack Trunk